

# TRUYARD



## MT 50 INSTRUCTION MANUAL

### IMPORTANT

Read this book carefully before operating this machine

# TRUYARD

## Safety Instructions

- (1) Read Safety and operating instructions carefully.
- (2) Always wear suitable footwear. Do not mow in bare feet.
- (3) Always stop the engine and disconnect the spark plug (s) when guards are not in place.
- (4) Check that the items to be mowed are free of all foreign debris. This includes and is not limited to nails, wire, rope etc.
- (5) Do not allow children to come near the mower. Always ensure that the children are at a safe distance and are well away from the machine.
- (6) Do not put hands whatsoever inside the machine while the machine is running.
- (7) Read the engine manufacturer's operating instructions carefully. Do not alter governor settings or over speed the engine.
- (8) Take great care when refuelling the engine. Never have a lit cigarette or match near the refuelling area. Always refuel outdoors. Always turn off engine when you are refuelling and do not refuel if engine is hot. If spillage occurs mop up immediately and wait a suitable time so the fumes disappear. When storing fuel make sure it is in a suitably designed container and it is stored in a cool dry place.
- (9) Mow only in daylight when visibility is good.
- (10) When mowing, slopes should be treated with caution.
- (11) When you leave the mower unattended always stop the engine.
- (12) Do not use the mower in confined spaces with no ventilation.
- (13) It is advisable to wear suitable hearing protection.
- (14) It is advisable to wear safety glasses whilst operating the mower.
- (15) Always operate with all guards in place.
- (16) Do not look into the mower while machine is running.
- (17) Clean built up debris around the engine and machine at each refuelling or sooner if needed. Clean more often under dusty conditions or when airborne debris is present or when cutting tall dry grass.
- (18) Do not let grass or other debris build up around the MT 50 whatsoever.


# TRUYARD

## Operating Instructions

Before starting read the safety instructions, operating instructions and the engine operating instructions. Always ensure that the engine has oil as per engine instructions.

### Pre-Starting

Check that there is oil in the engine. Use sae 30 oil and ll as per engine manufacturer 's instructions. Fuel engine with unleaded fuel only. Follow the engine manufacturers instruction manual on starting the engine. Check the air filter is clean

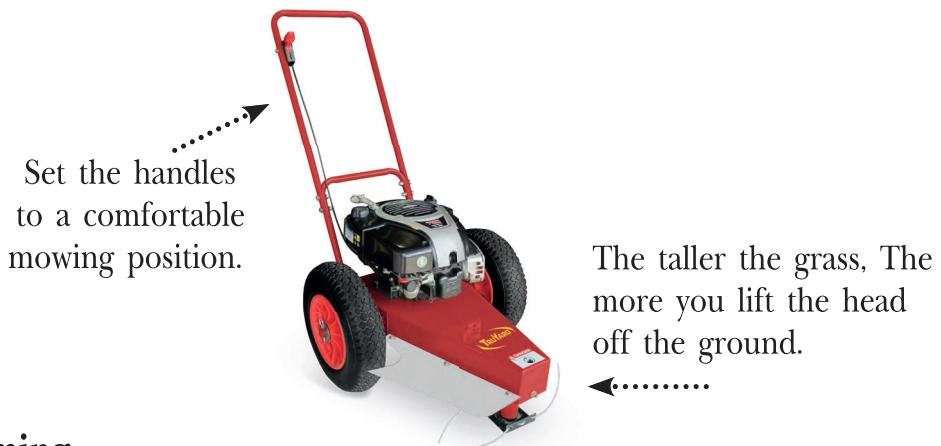

### **Mowing/Trimming**

When mowing or trimming with you MT 50 it is best to slightly raise the cutting head off the ground. You can set the handles of the machine so that lifting the head is in a natural position. When you are doing tall grass lift the head higher as you will find the cutting cord will cut the high grass first and then will cut the grass lower as the head rotates.

### **Changing the Nylon cord**

**Remove the spark plug lead before you change the Nylon cord.**



1. Gently lean the MT 50 backwards. Cut two lengths of cord 550 mm. Fold one length into two and push each end through the holes in the middle. Then put each end of the nylon chord through the end holes. Repeat for the other side.

**PLEASE NOTE: BE VERY CAREFUL TIPPING THE MT 50 BACKWARDS. DO NOT TIP THE MT 161 BACK MORE THAN 30 DEGREES.**

# TRUYARD

## Maintenance

WARNING: ALWAYS MAKE SURE THE MT 50 IS COMPLETELY DISABLED BY MAKING SURE THE ENGINE HAS STOPPED AND REMOVING THE SPARK PLUG LEAD, BEFORE YOU REMOVE ANY GUARDS OR PARTS, OR DO ANY MAINTENANCE.

### Tightening the Drive Belt



Drive belt tension nut

From time to time you will need to tighten or replace the drive belt. This is very easy to do. Loosen the bolts holding the engine. On the back of the machine there is a belt tensioner nut. Turn this nut in a clockwise direction until the belt is moderately tight. Do not over tighten as this could cause damage.

### General Cleaning of your MT 50

Because of the general nature of what you are cutting with the MT 50 it is very important to clear the MT 50 of all debris built up around the machine. Very regularly remove grass and debris that builds up around the engine and the rest of the MT 50. A build up of debris around the muffler could cause a fire. Inspect and clean regularly when using the MT 50. Regularly clean the cooling system. See engine manufacturers operating manual on cleaning the cooling system and internal cooling fins.

Regularly remove a build up of debris and grass around the muffler whilst operating this machine. **Not keeping this clean could cause a fire**



Keep air filter clean. The MT 50 is supplied with different motors. Check your particular motors operating manual on how to maintain the motor. In some conditions your air filter will need to be cleaned everytime you need to refuel.

**Keeping the air filter clean is very important for making your machine run properly!**

# TRUYARD

## Warranty

Under the TRUYARD warranty your MT 50 is warranted for one year from the date of purchase against mechanical defects, faulty workmanship or material. 90 days for commercial use with the exception for the use of hire or rental where no warranty is given. This warranty covers only the replacement, repair or adjustment of any part which fails as a result of a fault in manufacture or assembly. Defective parts will be repaired or replaced without charge for labour or material subject to the conditions details below.

### **Warranty Exclusions, Limitations and Rights.**

- (1) Any failure that results from accident, abuse or neglect is not covered by this warranty.
- (2) Transport of the MT 50 to and from the manufacture, their agents or dealers, to be paid for by the owner.
- (3) Proof of purchase date must be provided prior to the commencement of the warranty work.
- (4) Any failure of parts or material that is contributable to fair wear.
- (5) Any indirect or consequential loss, damage, costs or expenses suffered by the consumer that may result either directly or indirectly from the failure or malfunction of the product.
- (6) Any repairs carried out other than those by authorised TRUYARD agents or dealers cancel this warranty.
- (7) Engine warranty is separate and is in accordance with the Engine manufacturers express warranty.